



Installationsbeskrivning ASSA ABLOY elslutbleck 992-serien

ASSA ABLOY
Opening Solutions

Allmänna riktlinjer vid installation

- ASSA ABLOY elslutbleck i 992 serien passar för monteringsstolpar i 99-serien med tre fästskruvar.
- För att bibehålla sina egenskaper måste elslutblecket monteras
 - parallellt mot låshuset
 - så att avståndet mellan låsstolpe och monteringsstolpe är 3mm +/- 1mm.
- Smörj cylinder-, och tryckesfall med ASSA ABLOY låsfett.

Tänk på följande:



Rätt spänning



Ej övermålning



Noggrant
montage



Ej vattentät



Justera ej med
elslutblecket monterat

Inkoppling:


- Spänning 12VDC eller 24VDC, stabiliserad
- Effekt 12W max, 6W per spole
- Inbyggda skyddsdioder

- | | |
|-------|-----------------------------------|
| 1. + | } 12VDC eller 24VDC, stabiliserad |
| 2. - | |
| 3. | |
| 4. NC | } Kolvkontakt |
| 5. C | |
| 6. NO | |

Funktions inställning


Rättvänd funktion

Omvänd funktion

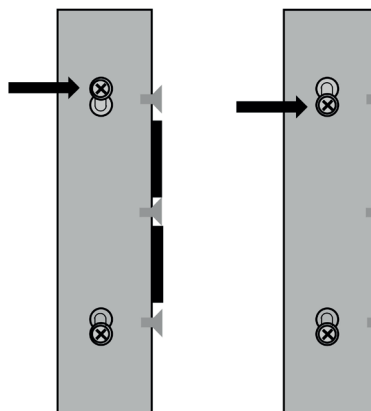

Lossa inställningsskruven endast så mycket att det går att förflytta den invändiga mekanismen till önskat läge. Efter dra sedan båda skruvarna.

Höjdförhållande olika låstyper

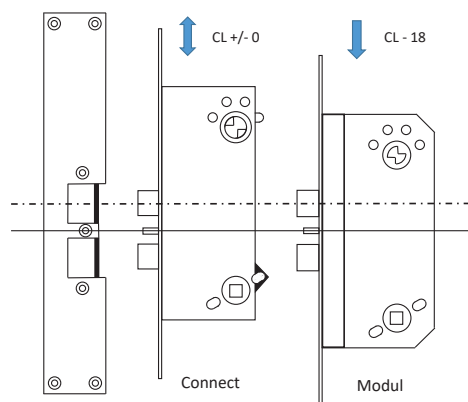

ASSA ABLOY Opening Solutions Sweden
Customer support:
Phone intl. +46 (0)16 17 71 00
Phone nat. 0771-640 640
Fax +46 (0)16 17 73 72
e-mail: helpdesk.se.openingsolutions@assaabloy.com
www.assaabloyopeningsolutions.se

M4259.1912




Fitting instruction ASSA ABLOY electric strike 992-series

ASSA ABLOY
Opening Solutions

Fitting guidelines

- ASSA ABLOY electric strikes in 992 series should be fitted with face plates in 99-series with three screws.
- To retain the characteristics of the strike it must be:
 - Aligned to the faceplate of the lock case.
 - Fitted with a 3mm +/-1 mm gap between the face of the lock case and the face plate of the strike.
- Lubricate both the cylinder- and the handle latch with ASSA ABLOY lock grease.

Consider this:

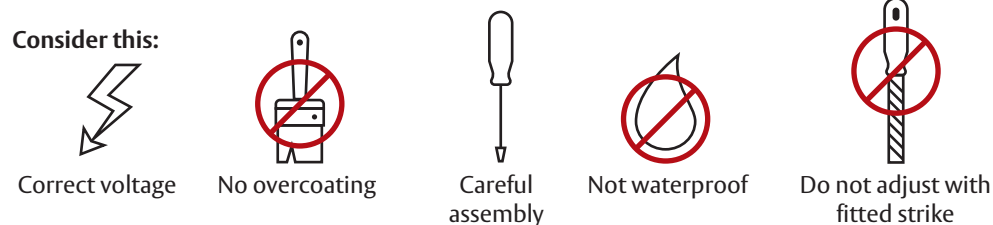


Wiring:

- Power supply 12VDC or 24VDC, regulated
- Effect 12W peak, 6W per coil
- Protection diode is not required


- | | | |
|-------|---|---------------------------|
| 1. + | } | 12VDC or 24VDC, regulated |
| 2. - | | |
| 3. | | |
| 4. NC | } | Latch bolt monitor |
| 5. C | | |
| 6. NO | | |

Setting function

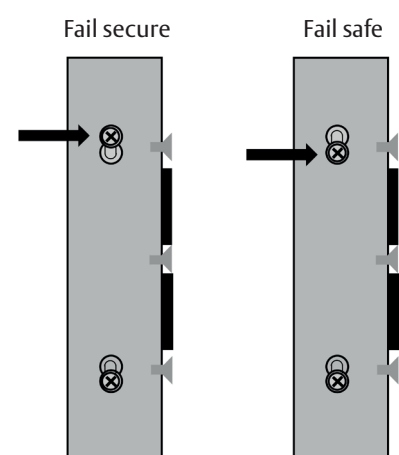

To change from fail secure to fail safe the screw in the bottom must be untighten, then the internal mechanism can be moved into new position.

Height ratios for various locks

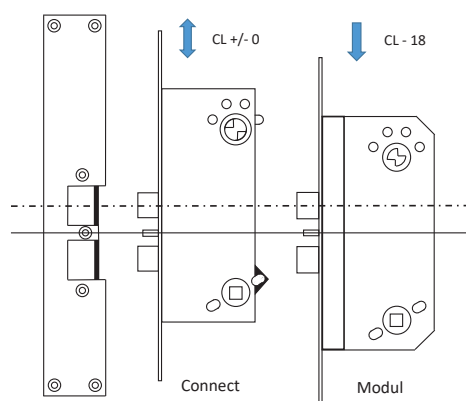

ASSA ABLOY Opening Solutions Sweden
Customer support:
Phone intl. +46 (0)16 17 71 00
Phone nat. 0771-640 640
Fax +46 (0)16 17 73 72
e-mail: helpdesk.se.openingsolutions@assaabloy.com
www.assaabloyopeningsolutions.se

M4259.1912